EVB_EC600X、EC800X

EVB 0X、E800X 3.2

11 07

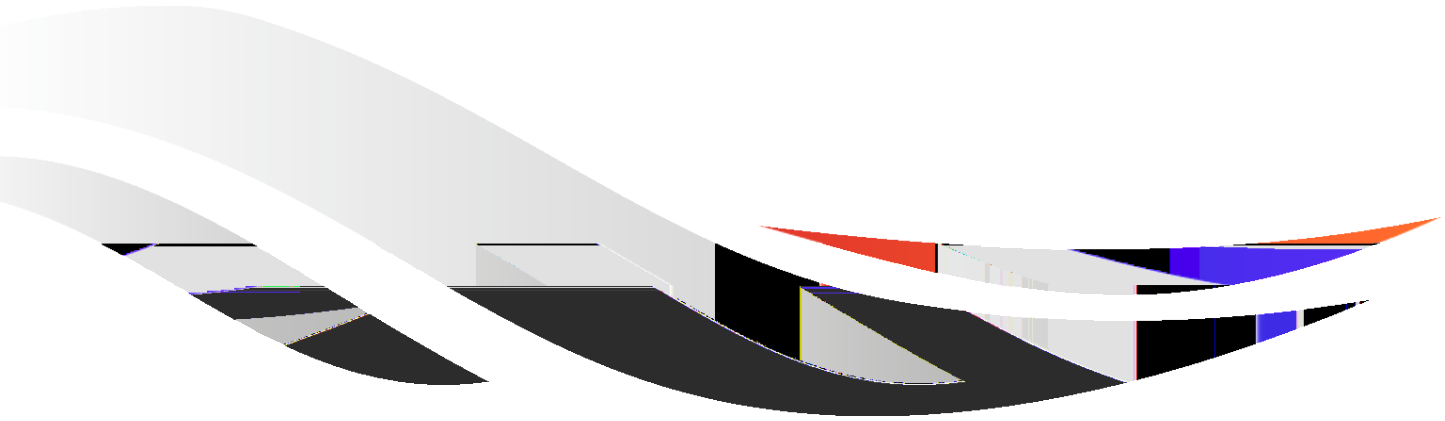

EC600X— EC600 EC600N EC600U EC600M
EC800X— EC800 EC800M EC800E
EVB—
V3.X--

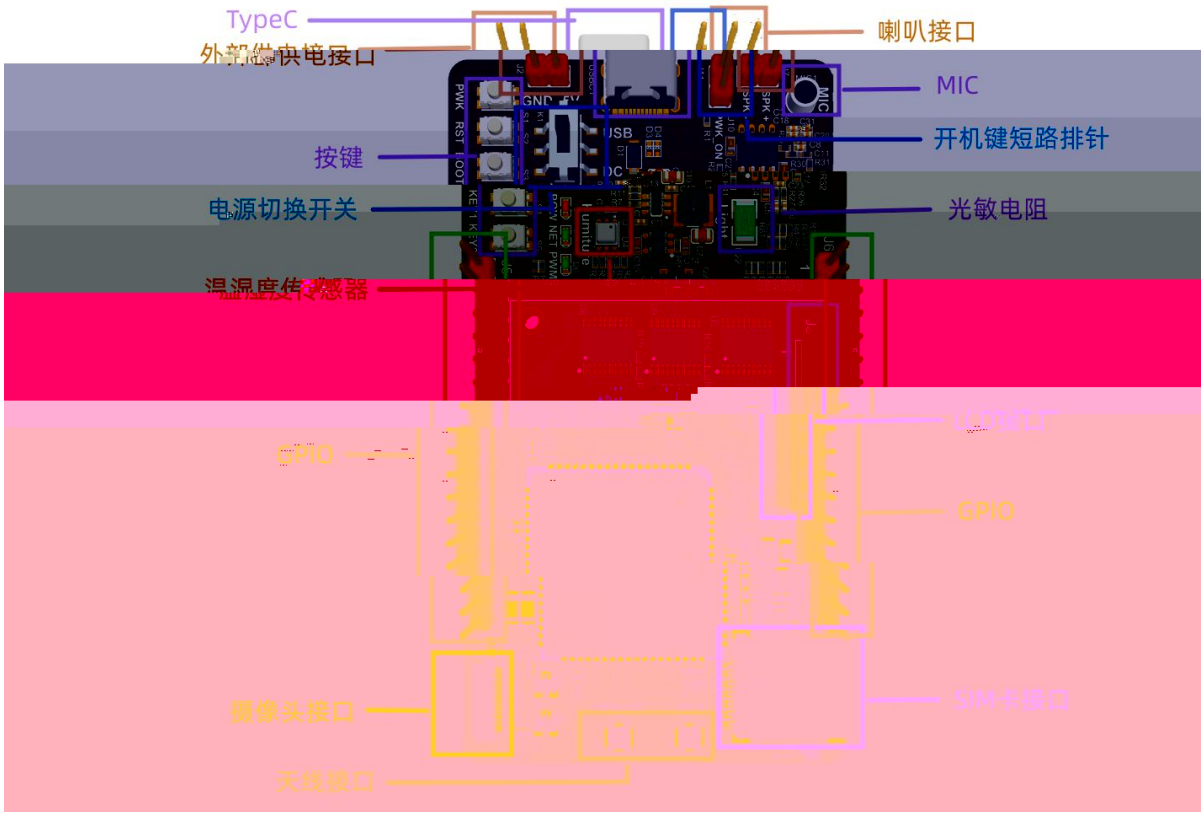
TypeC
外部供电接口
喇叭接口
MIC
开机键短路排针
按键
电源切换开关
光敏电阻
温湿度传感器
GPIO
LCD接口
GPIO
摄像头接口
SIM卡接口
天线接口

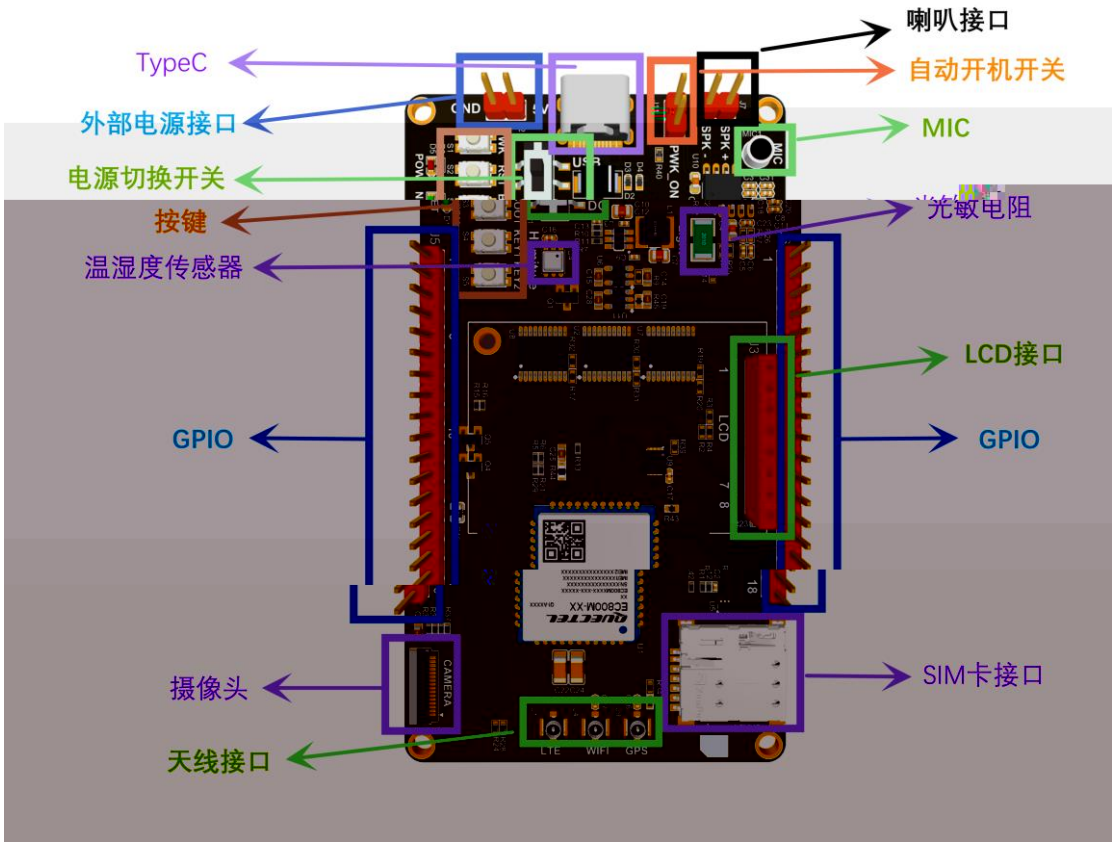

序号	名称	型号	是否支持	接口类型

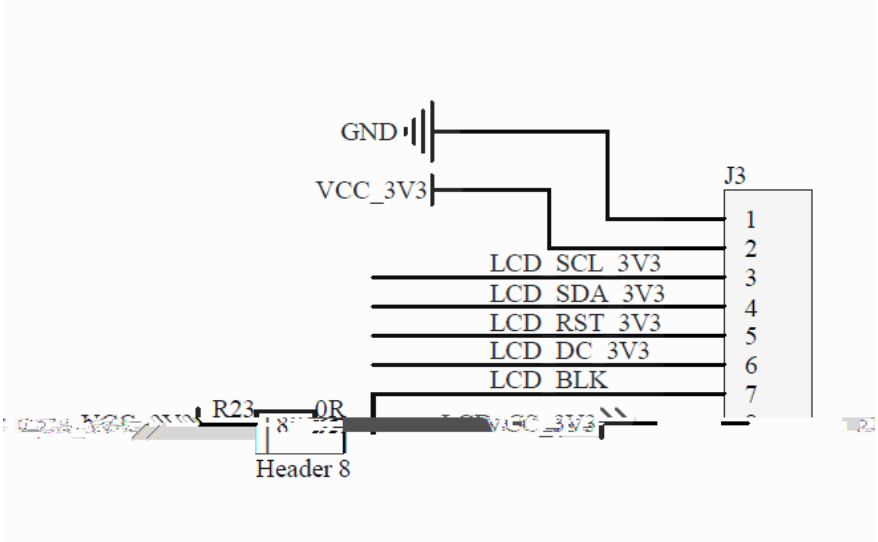
GND
VCC_3V3
J3
1
2
3
4
5
6
7
LCD_SCL_3V3
LCD_SDA_3V3
LCD_RST_3V3
LCD_DC_3V3
LCD_BLK
R23
0R
Header 8

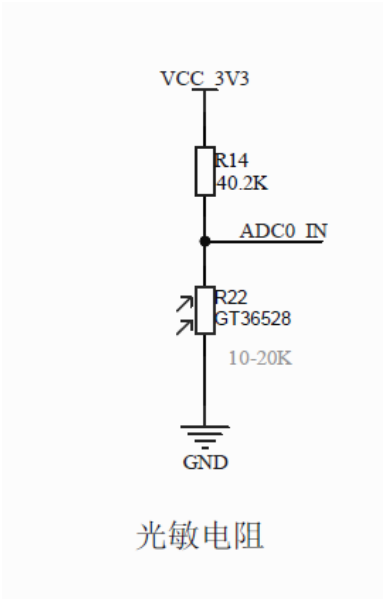
VCC_3V3
R14
40.2K
ADC0_IN
R22
GT36528
10-20K
GND

光敏电阻

请注意

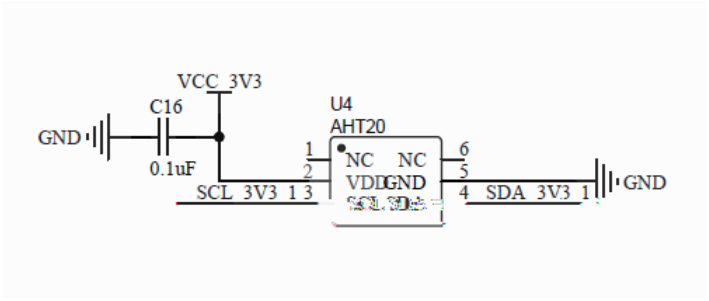
VCC_3V3
C16
GND
0.1uF
U4
AHT20
NC
NC
VDD
GND
SCL
SDA
3V3_1
3
4
5
6
SDA_3V3_1
GND

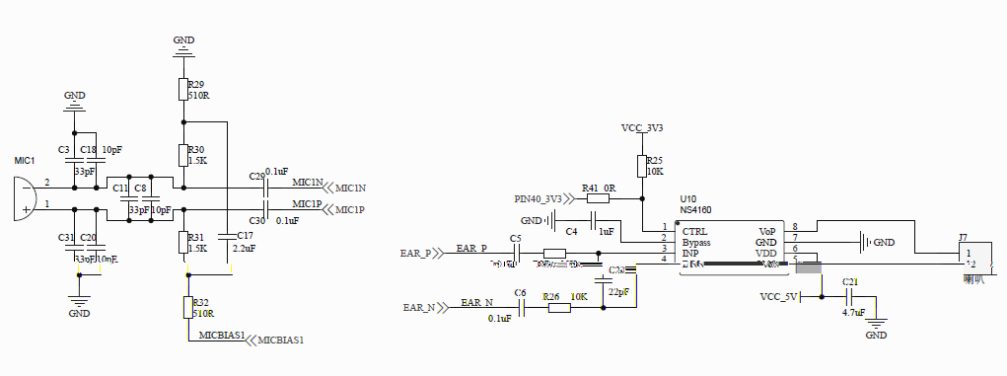
GND
R29
510R
GND
C3 C18 10pF
33pF
MIC1
2
1
C11 C8
33pF 10pF
R30
1.5K
C29 0.1uF
MIC1N
MIC1N
MIC1P
MIC1P
C30 0.1uF
C31 C20
33pF 10pF
R31
1.5K
C17
2.2nF
GND
R32
510R
MICBIAS1
MICBIAS1
VCC_3V3
R25
10K
R41 0R
PIN40_3V3
GND
C4 1uF
U10
NS4160
CTRL
Bypass
INP
INN
VoP
GND
VDD
8
7
6
5
GND
J7
1
2
喇叭
EAR_P
EAR_P
C5
C22
22pF
EAR_N
EAR_N
C6
0.1uF
R26 10K
C21
4.7uF
VCC_5V
GND

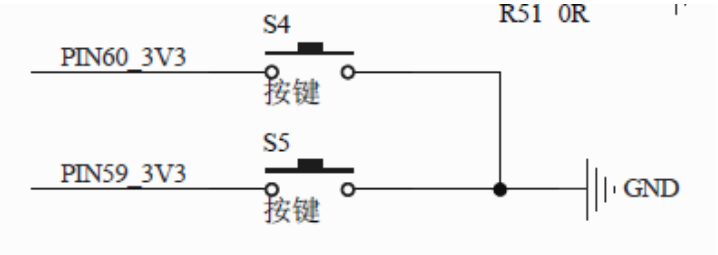
R51 0R
S4
PIN60_3V3
按键
S5
PIN59_3V3
按键
GND

开发板	开机操作

setup.exe

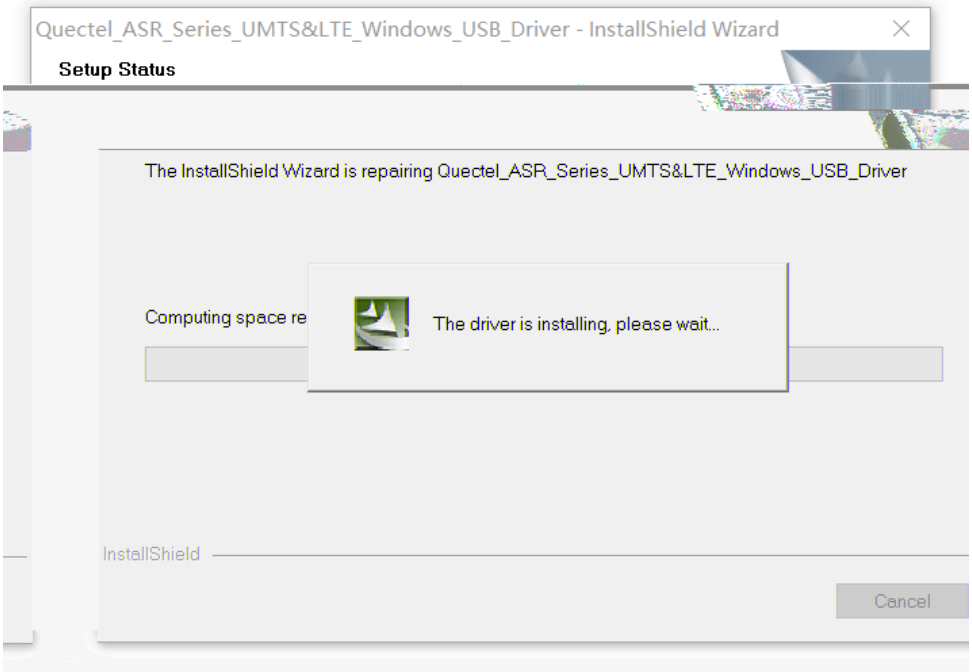
Quectel_ASR_Series_UMTS&LTE_Windows_USB_Driver - InstallShield Wizard
Setup Status
The InstallShield Wizard is repairing Quectel_ASR_Series_UMTS&LTE_Windows_USB_Driver
Computing space re
The driver is installing, please wait...
InstallShield
Cancel

Quectel USB AT Port (COMx)
Quectel USB AP Log Port (COMx)
Quectel USB CP Log Port (COMx)
Quectel USB Diag Port (COMx)
Quectel USB MOS Port (COMx)
Quectel Modem (COMx)
Quectel USB Serial-1 Port (COMx)
Quectel USB Serial-2 Port (COMx)

小提示

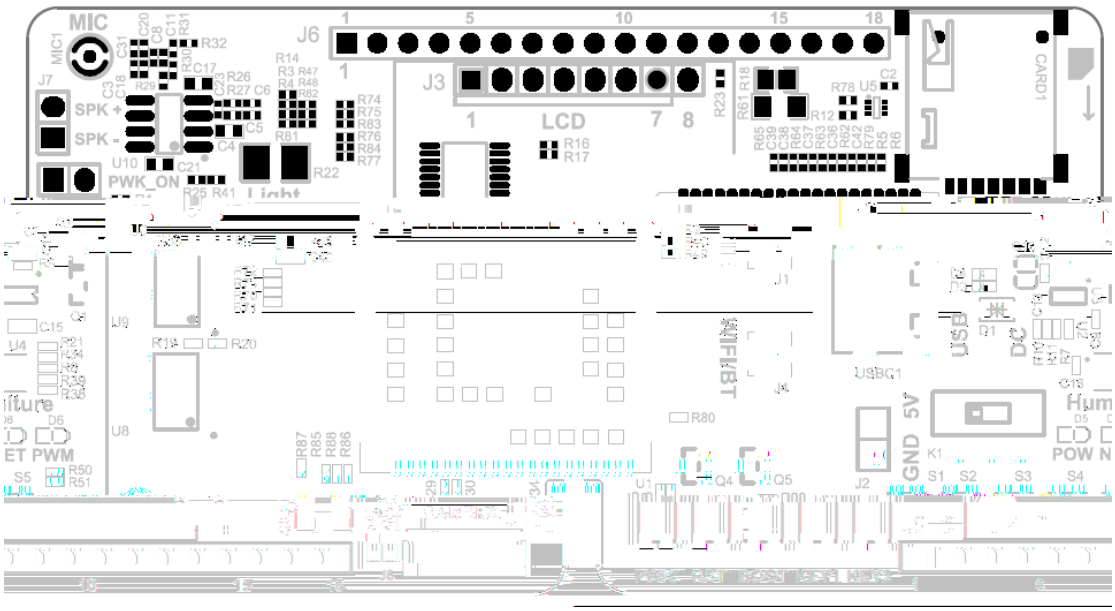
MIC
SPK
SPK
PWK_ON
LCD
J6
J3
CARD1
USBQ1
5V
GND
POW N

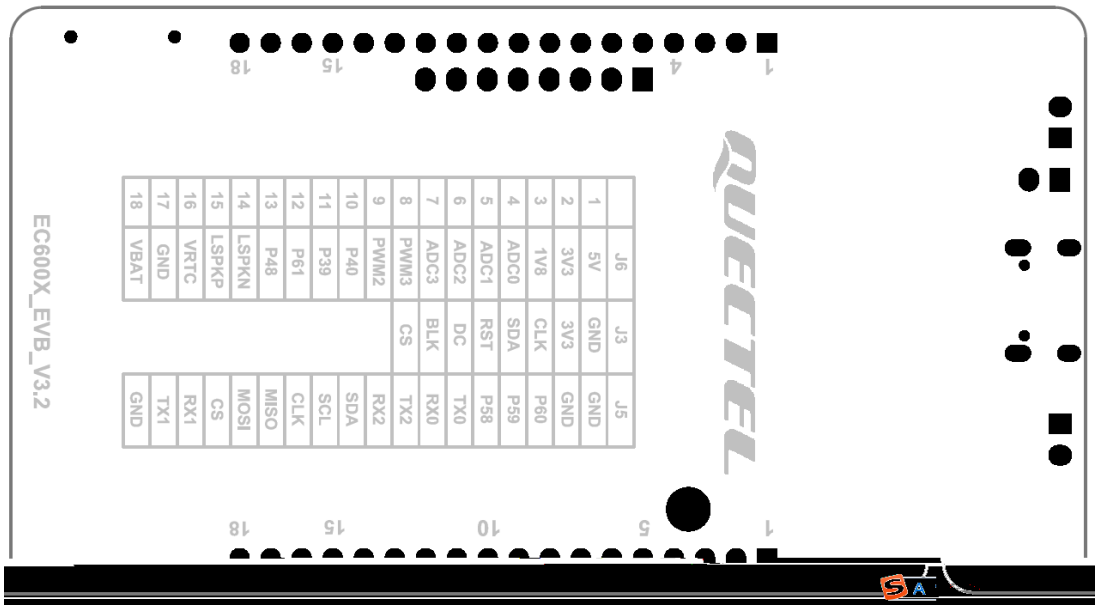
EC600X_EVB_V3.2
QUECTEL
J6 1 5V 2 3V3 3 1V8 4 ADC0 5 ADC1 6 ADC2 7 ADC3 8 PWM3 9 PWM2 10 P40 11 P39 12 P61 13 P48 14 LSPKN 15 LSPKP 16 VRTC 17 GND 18 VBAT
J3 GND 3V3 CLK SDA RST DC BLK CS
J5 GND GND P60 P59 P58 TX0 RX0 TX2 RX2 SDA SCL CLK MISO MOSI CS RX1 TX1 GND

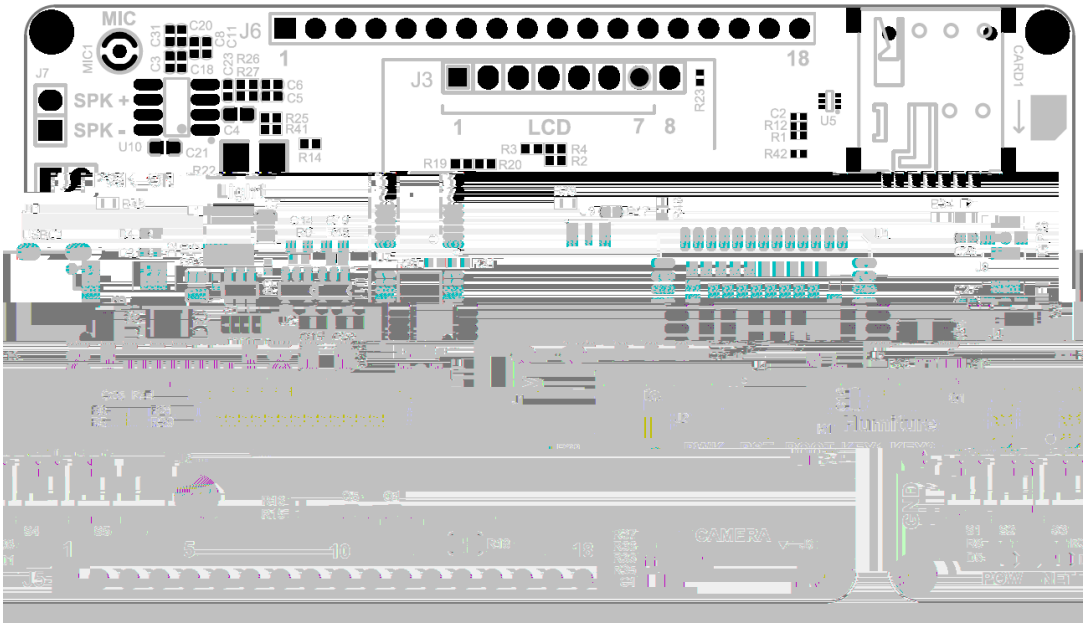
MIC
SPK +
SPK -
J6
J3
LCD
CAMERA
CARD1

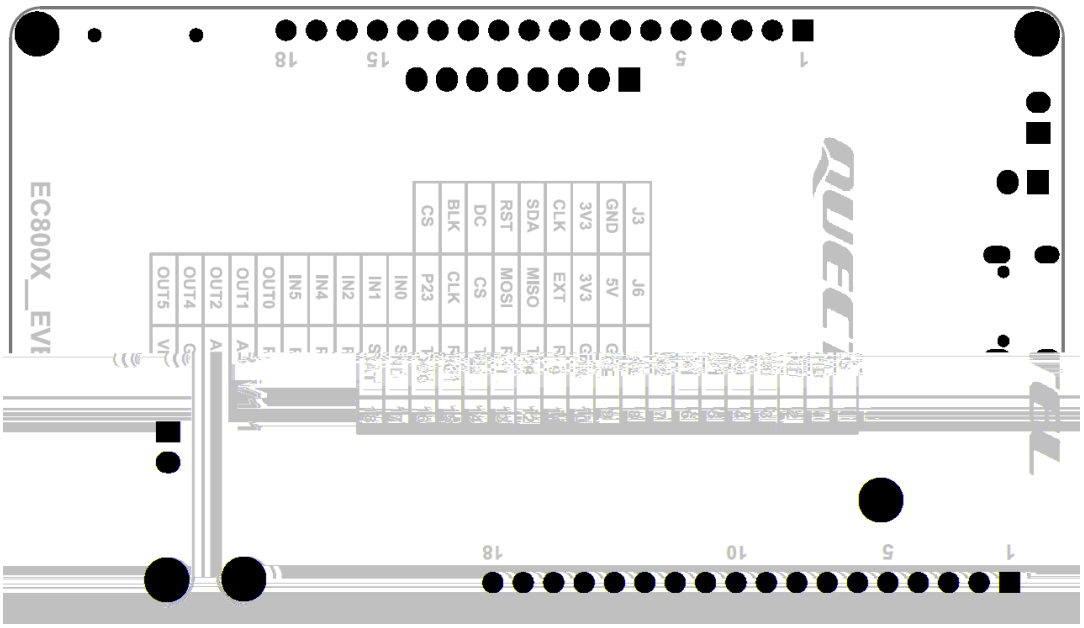
EC800X_EVB
J3
GND
3V3
CLK
SDA
RST
DC
BLK
CS
J6
5V
3V3
EXT
MISO
MOSI
CS
CLK
P23
IN0
IN1
IN2
IN4
IN5
OUT0
OUT1
OUT2
OUT4
OUT5

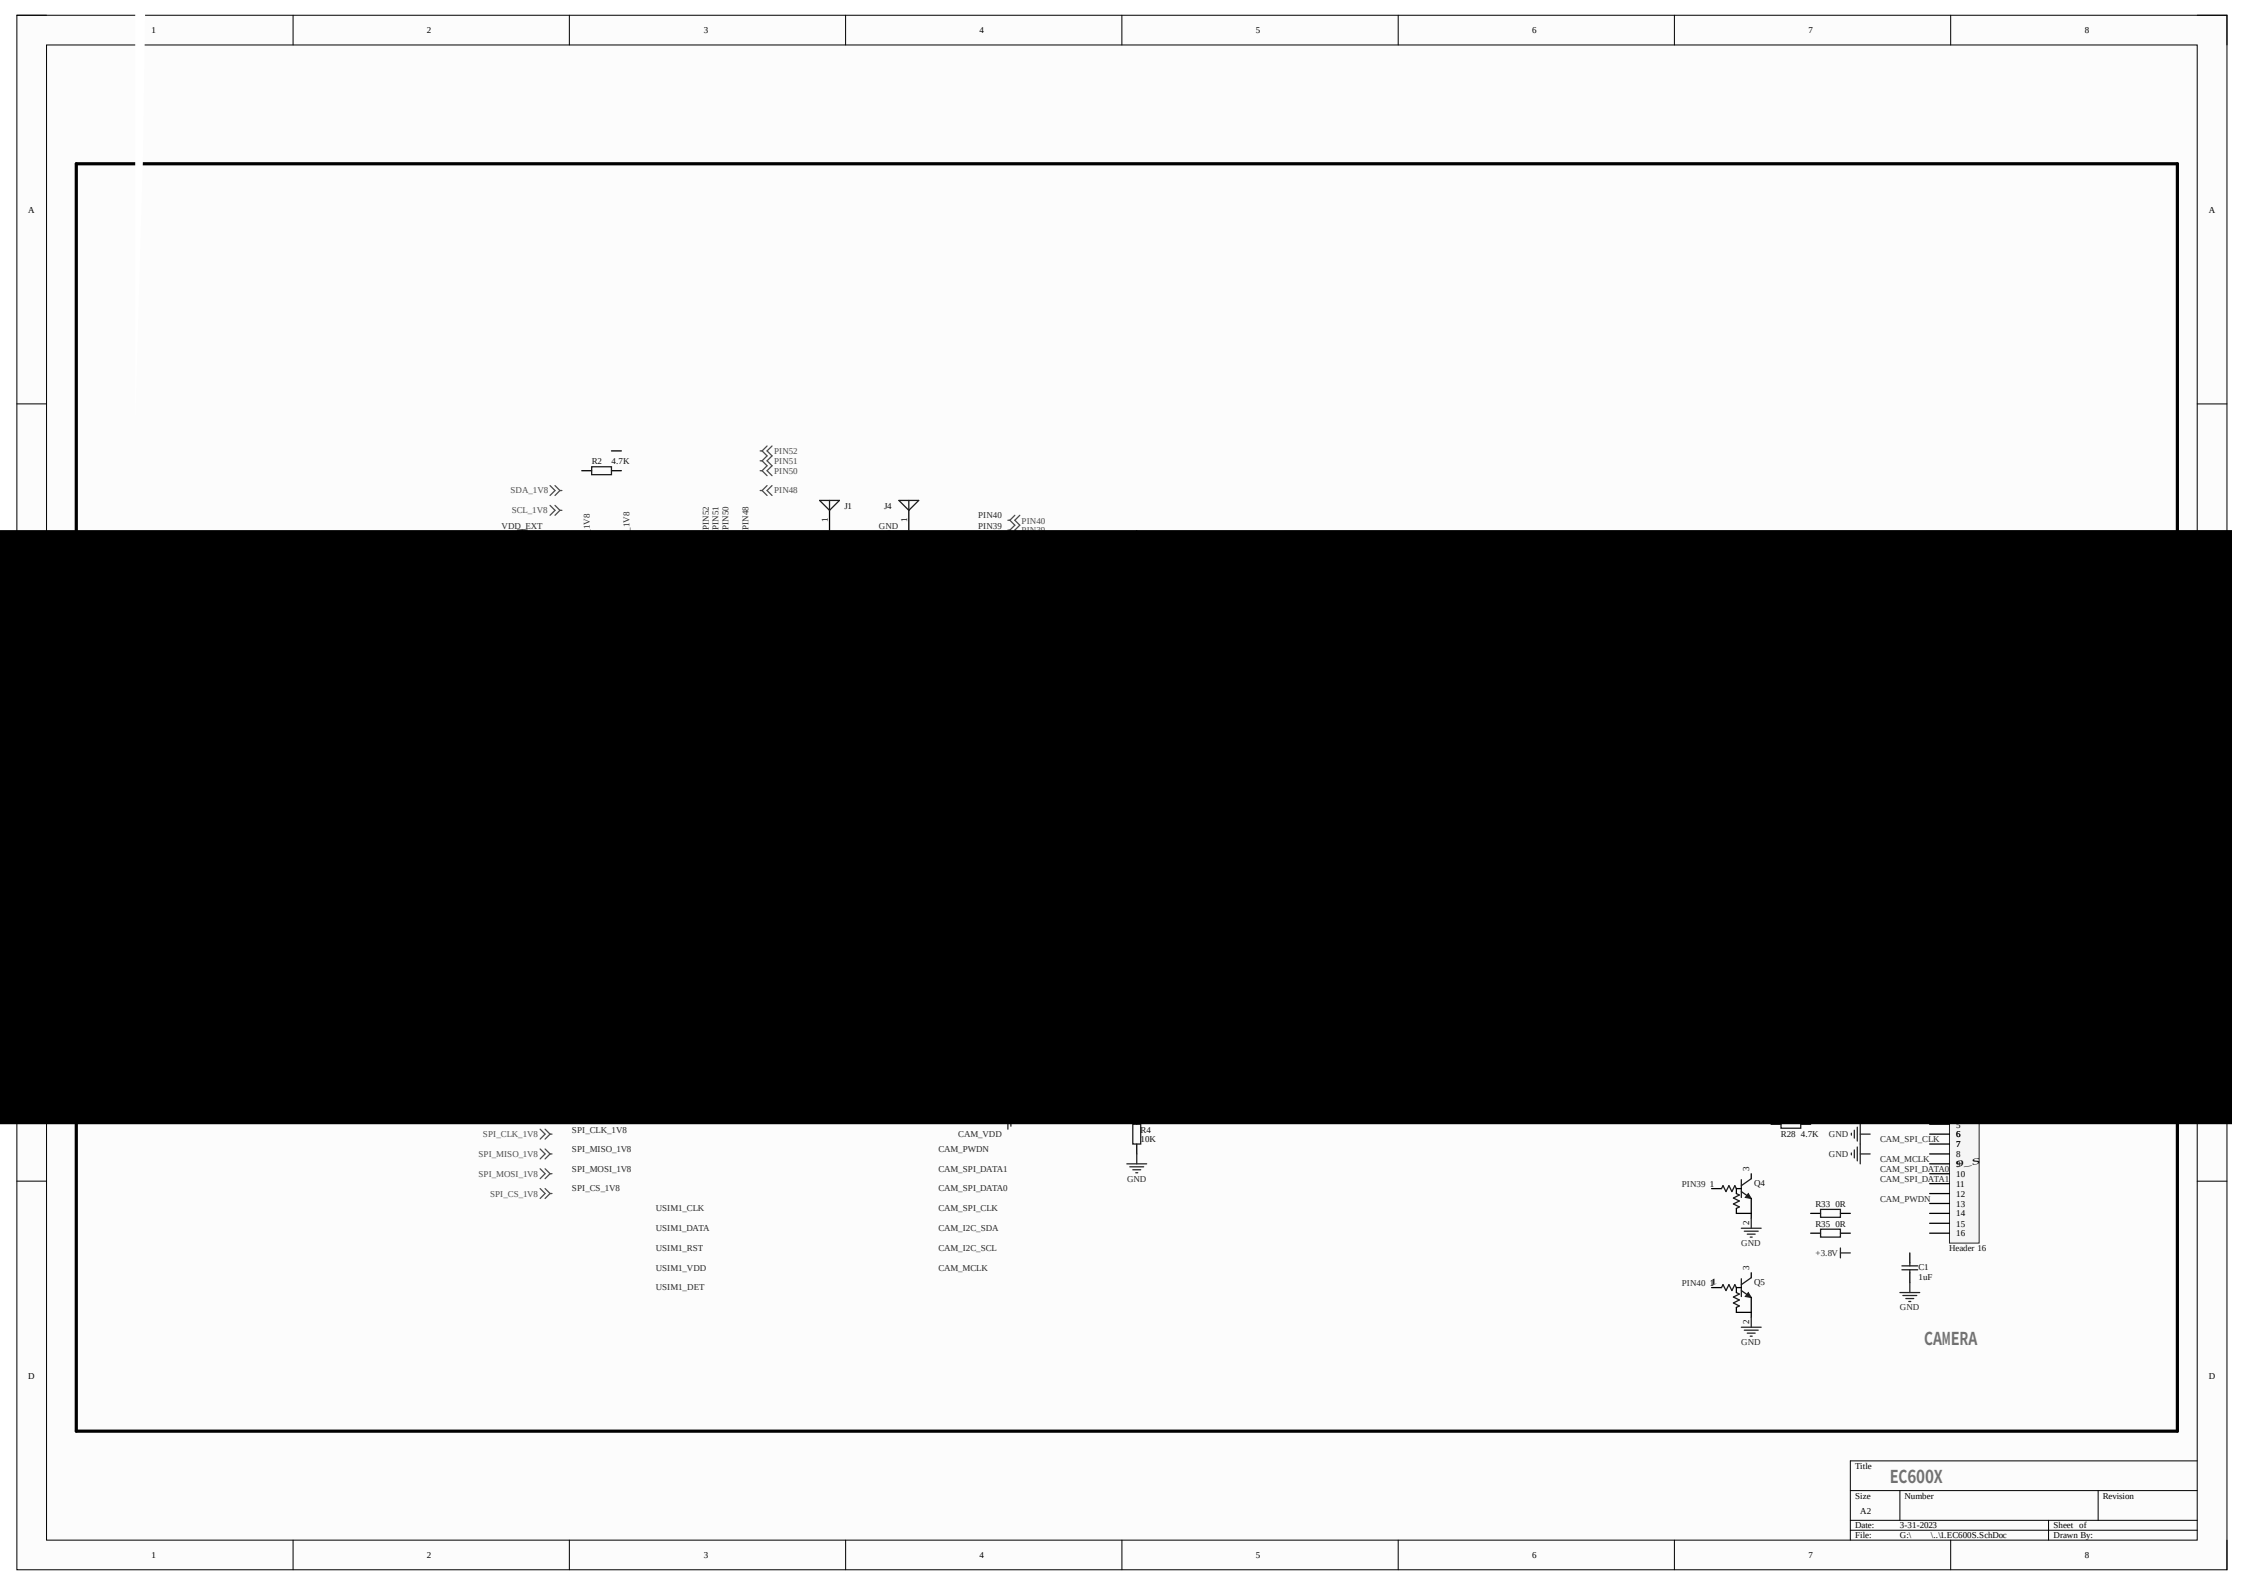
R2 4.7K
SDA_1V8
SCL_1V8
VDD_EXT
PIN52
PIN51
PIN50
PIN48
J1
J4
GND
PIN40
PIN39
SPI_CLK_1V8
SPI_MISO_1V8
SPI_MOSI_1V8
SPI_CS_1V8
USIM1_CLK
USIM1_DATA
USIM1_RST
USIM1_VDD
USIM1_DET
CAM_VDD
CAM_PWDN
CAM_SPI_DATA1
CAM_SPI_DATA0
CAM_SPI_CLK
CAM_I2C_SDA
CAM_I2C_SCL
CAM_MCLK
R4 10K
R28 4.7K
GND
CAM_SPI_CLK
CAM_MCLK
CAM_SPI_DATA0
CAM_SPI_DATA1
CAM_PWDN
Header 16
PIN39
Q4
R33 0R
R35 0R
+3.8V
C1 1uF
PIN40
Q5
CAMERA
Title
EC600X
Size
A2
Number
Revision
Date: 3-31-2023
Sheet of
File: G:\...\LEC600S.SchDoc
Drawn By:

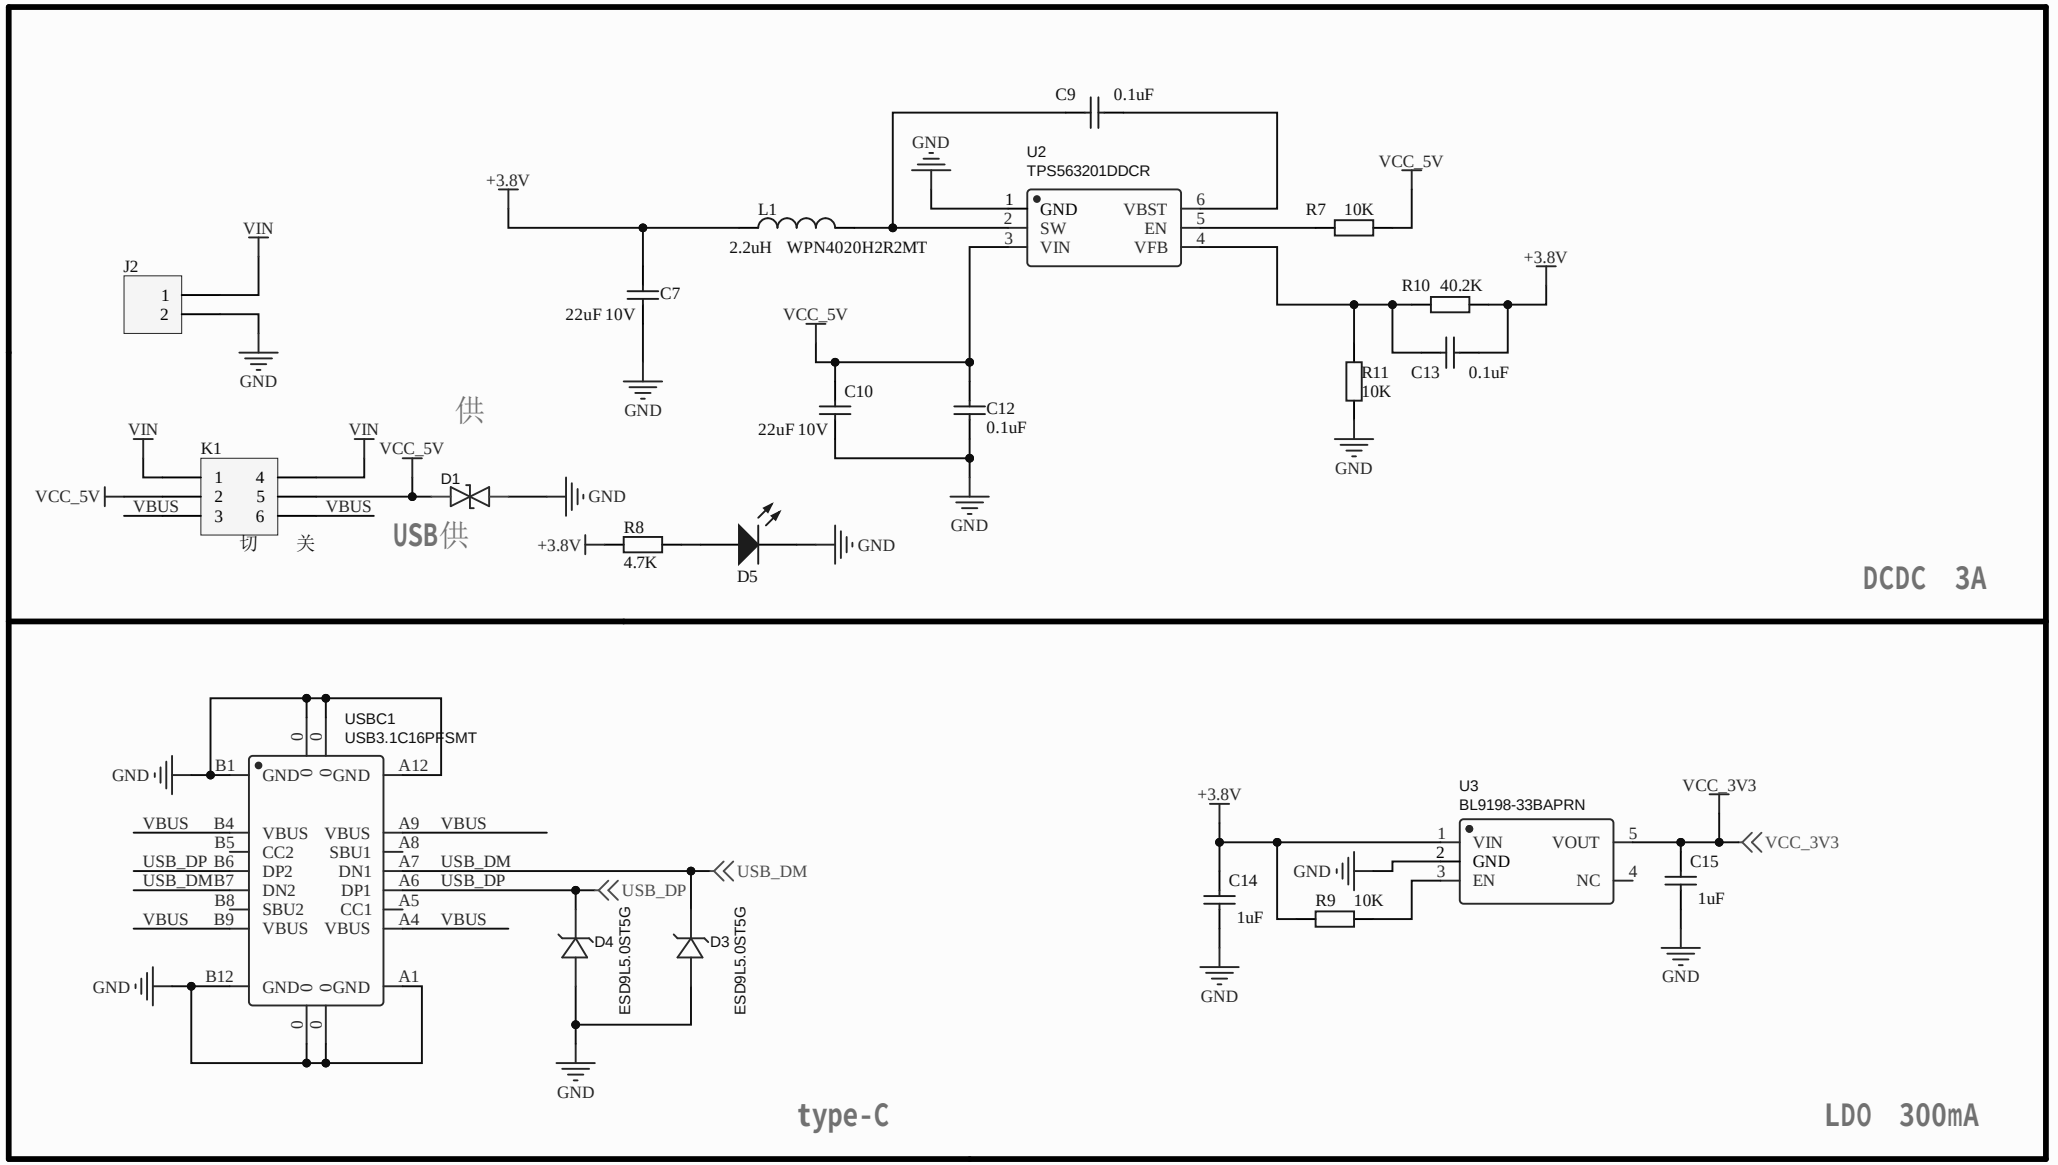

Title		
Size A4	Number	Revision
Date: 3-31-2023		Sheet of
File: G:\ \..\2.POWER.SchDoc		Drawn By:

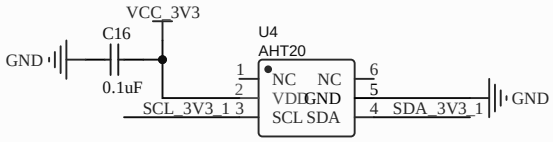

传

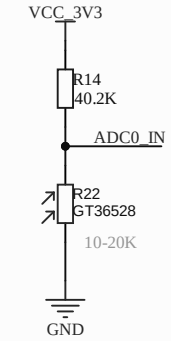

光

SENSOR

Title		
Size A4	Number	Revision
Date: 3-31-2023		Sheet of
File: G:\ \..\3.SENSOR+EEPROM.SchDoc		Drawn By:

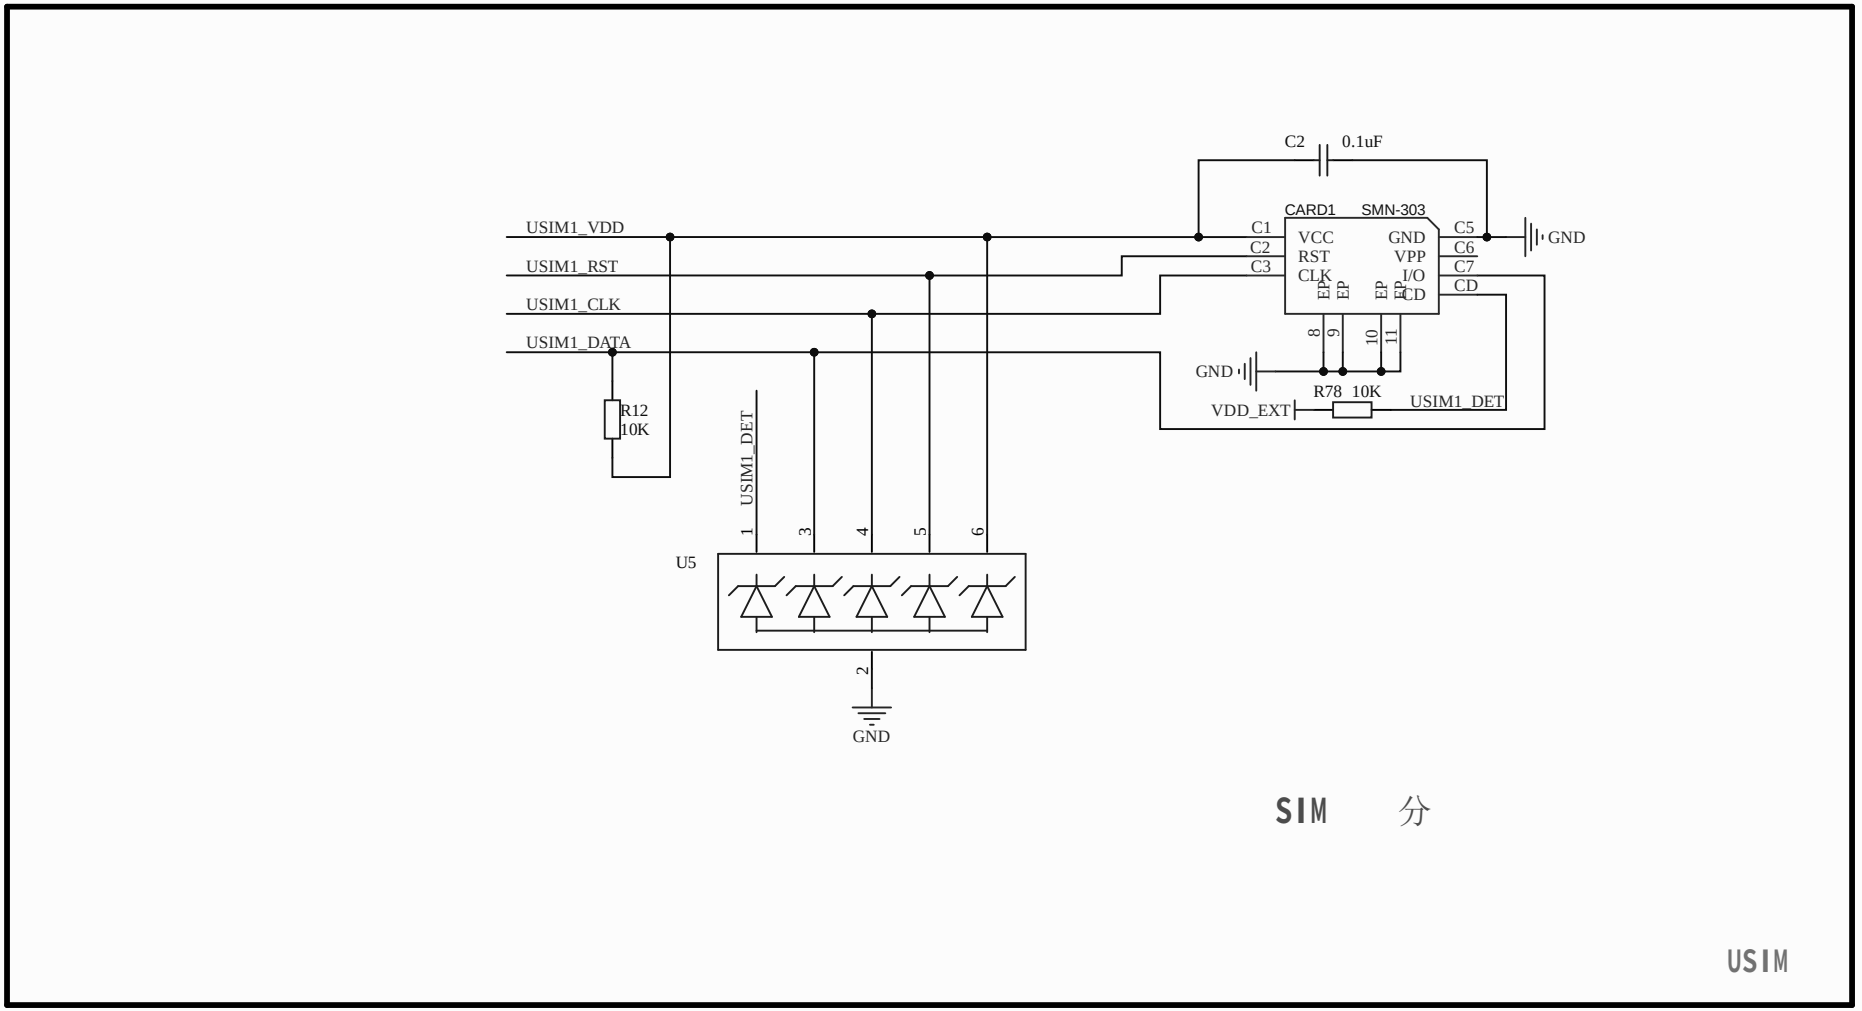

Title			
Size A4	Number		Revision
Date: 3-31-2023		Sheet of	
File: G:\ \..\4.SIM-CARD.SchDoc		Drawn By:	

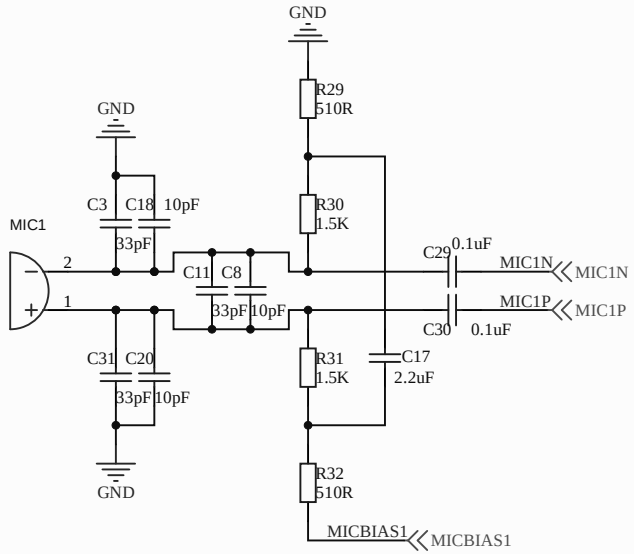

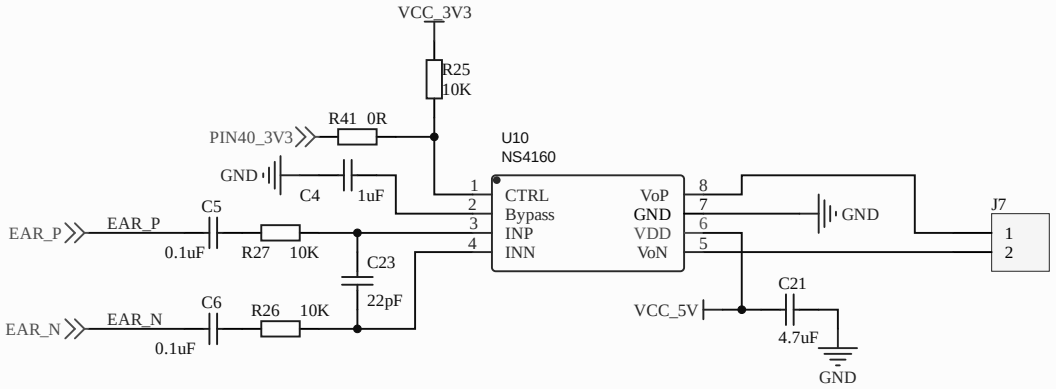

AUDIO 分

AUDIO

Title		
Size A4	Number	Revision
Date: 3-31-2023		Sheet of
File: G:\ \..\5.AUDIO.SchDoc		Drawn By:

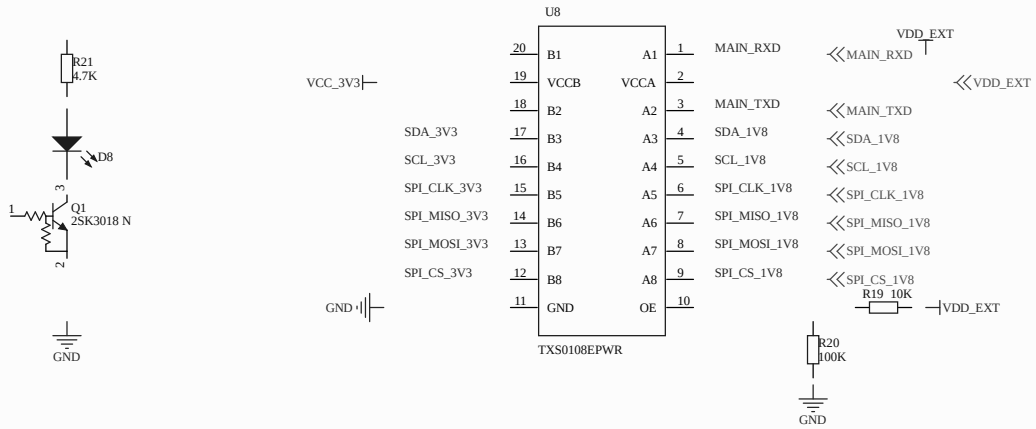

GPIO

Title		
Size A3	Number	Revision
Date: 3-31-2023		Sheet of
File: G:\ \..\6.GPIO+UART.SchDoc		Drawn By:

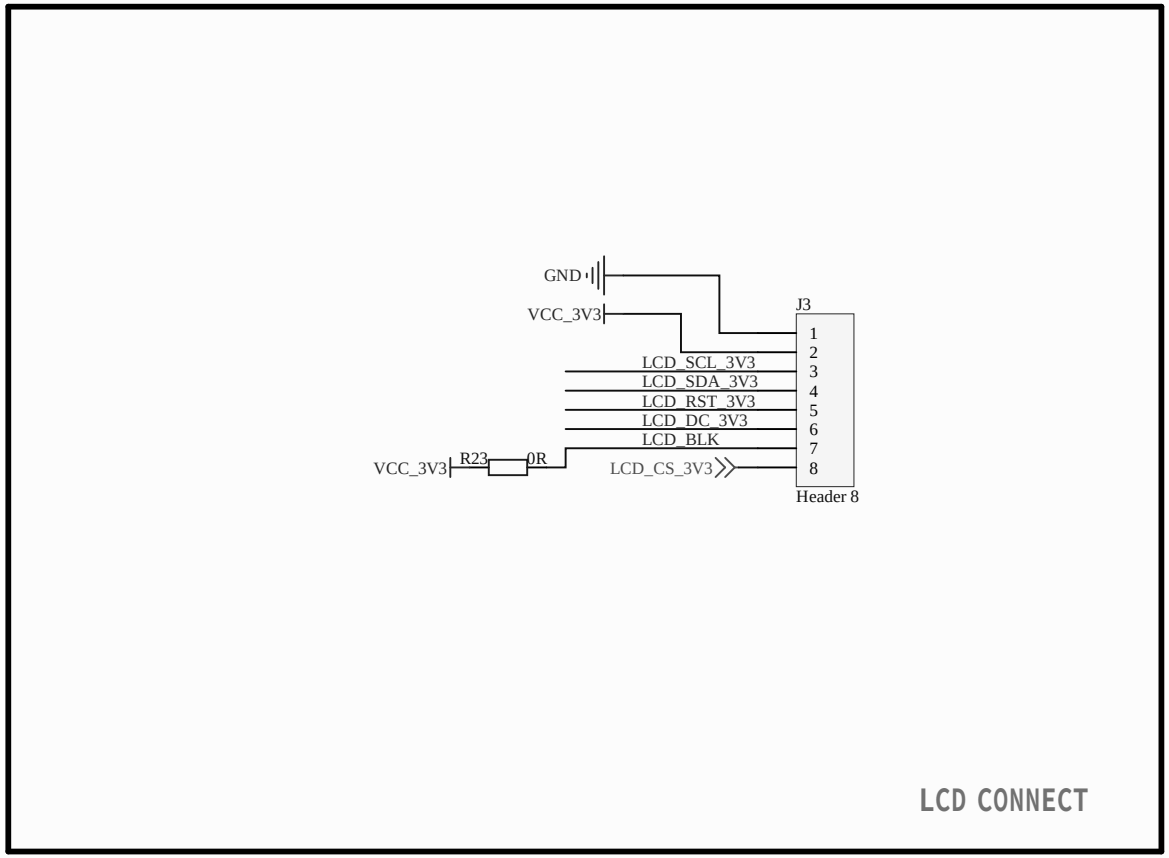

Title		
Size A4	Number	Revision
Date: 3-31-2023		Sheet of
File: G:\ \..\7.LCM.SchDoc		Drawn By:

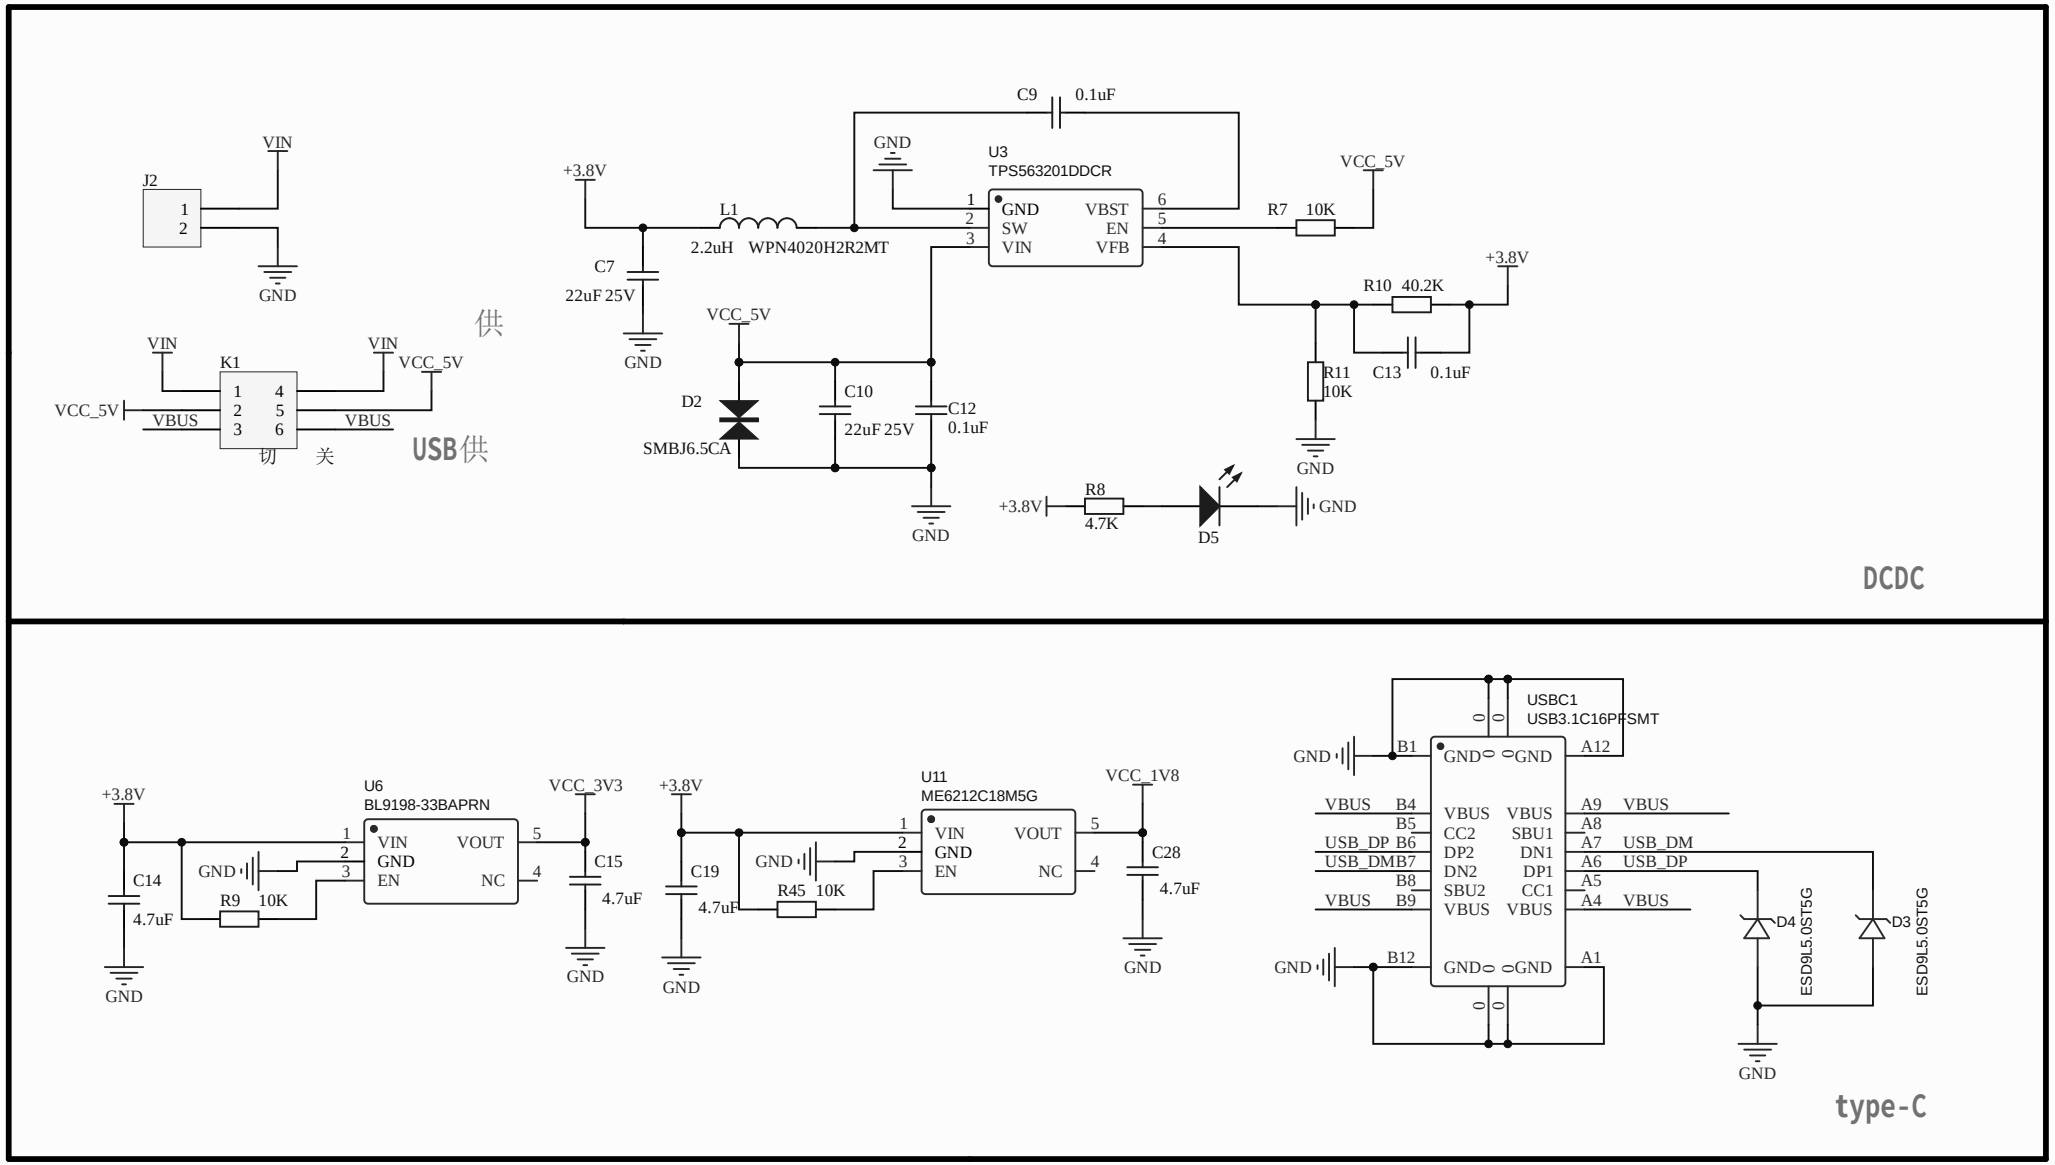
J2
VIN
GND
K1
VIN
VCC_5V
VBUS
切 关
USB供
C9 0.1uF
U3
TPS563201DDCR
+3.8V
L1
2.2uH WPN4020H2R2MT
C7
22uF 25V
GND
SW
VIN
VBST
EN
VFB
R7 10K
R10 40.2K
R11
10K
C13 0.1uF
D2
SMBJ6.5CA
C10
22uF 25V
C12
0.1uF
R8
4.7K
D5
DCDC
U6
BL9198-33BAPRN
VCC_3V3
C14
4.7uF
R9 10K
C15
4.7uF
U11
ME6212C18M5G
VCC_1V8
C19
4.7uF
R45 10K
C28
4.7uF
USBC1
USB3.1C16PFSMT
VBUS
CC2
DP2
DN2
SBU2
DP1
DN1
CC1
USB_DP
USB_DM
D4
D3
ESD9L5.0ST5G
type-C

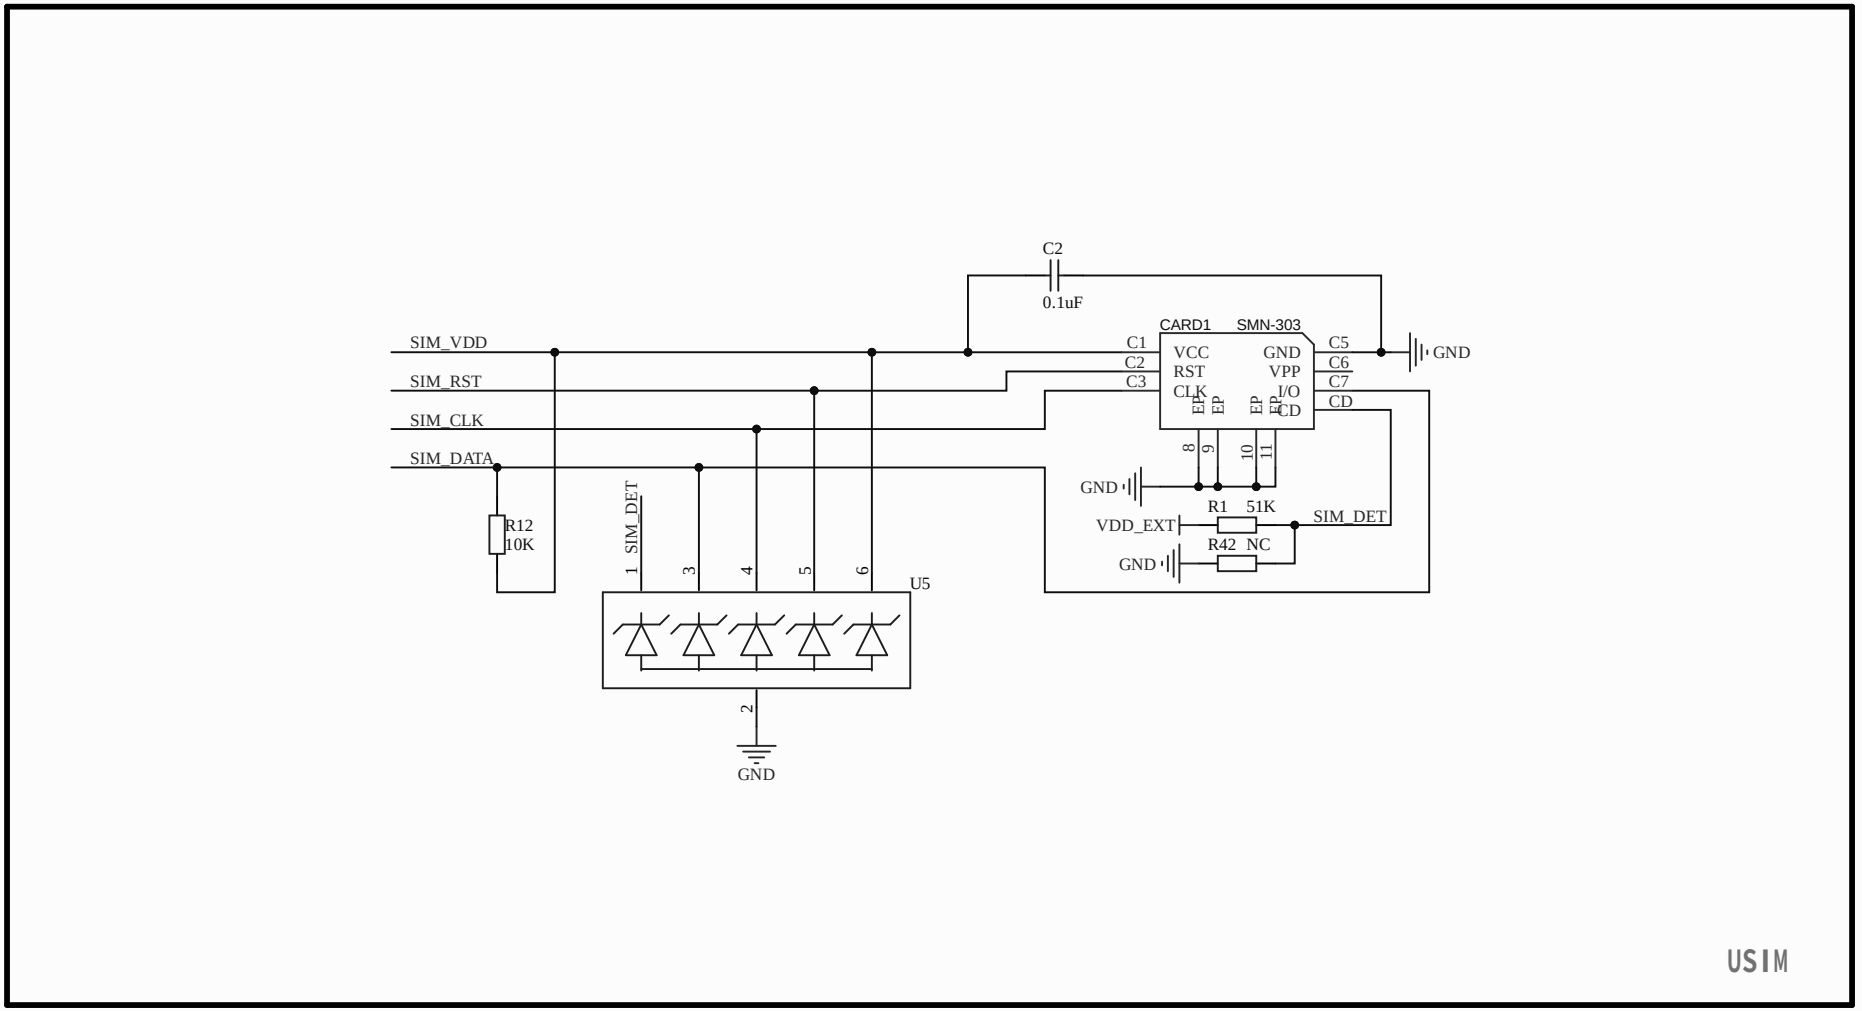
C2
0.1uF
CARD1 SMN-303
SIM_VDD
SIM_RST
SIM_CLK
SIM_DATA
C1
C2
C3
VCC
RST
CLK
GND
VPP
I/O
CD
C5
C6
C7
CD
GND
EP
8
9
10
11
R12
10K
SIM_DET
1
3
4
5
6
U5
2
GND
R1 51K
VDD_EXT
SIM_DET
R42 NC
GND
USIM

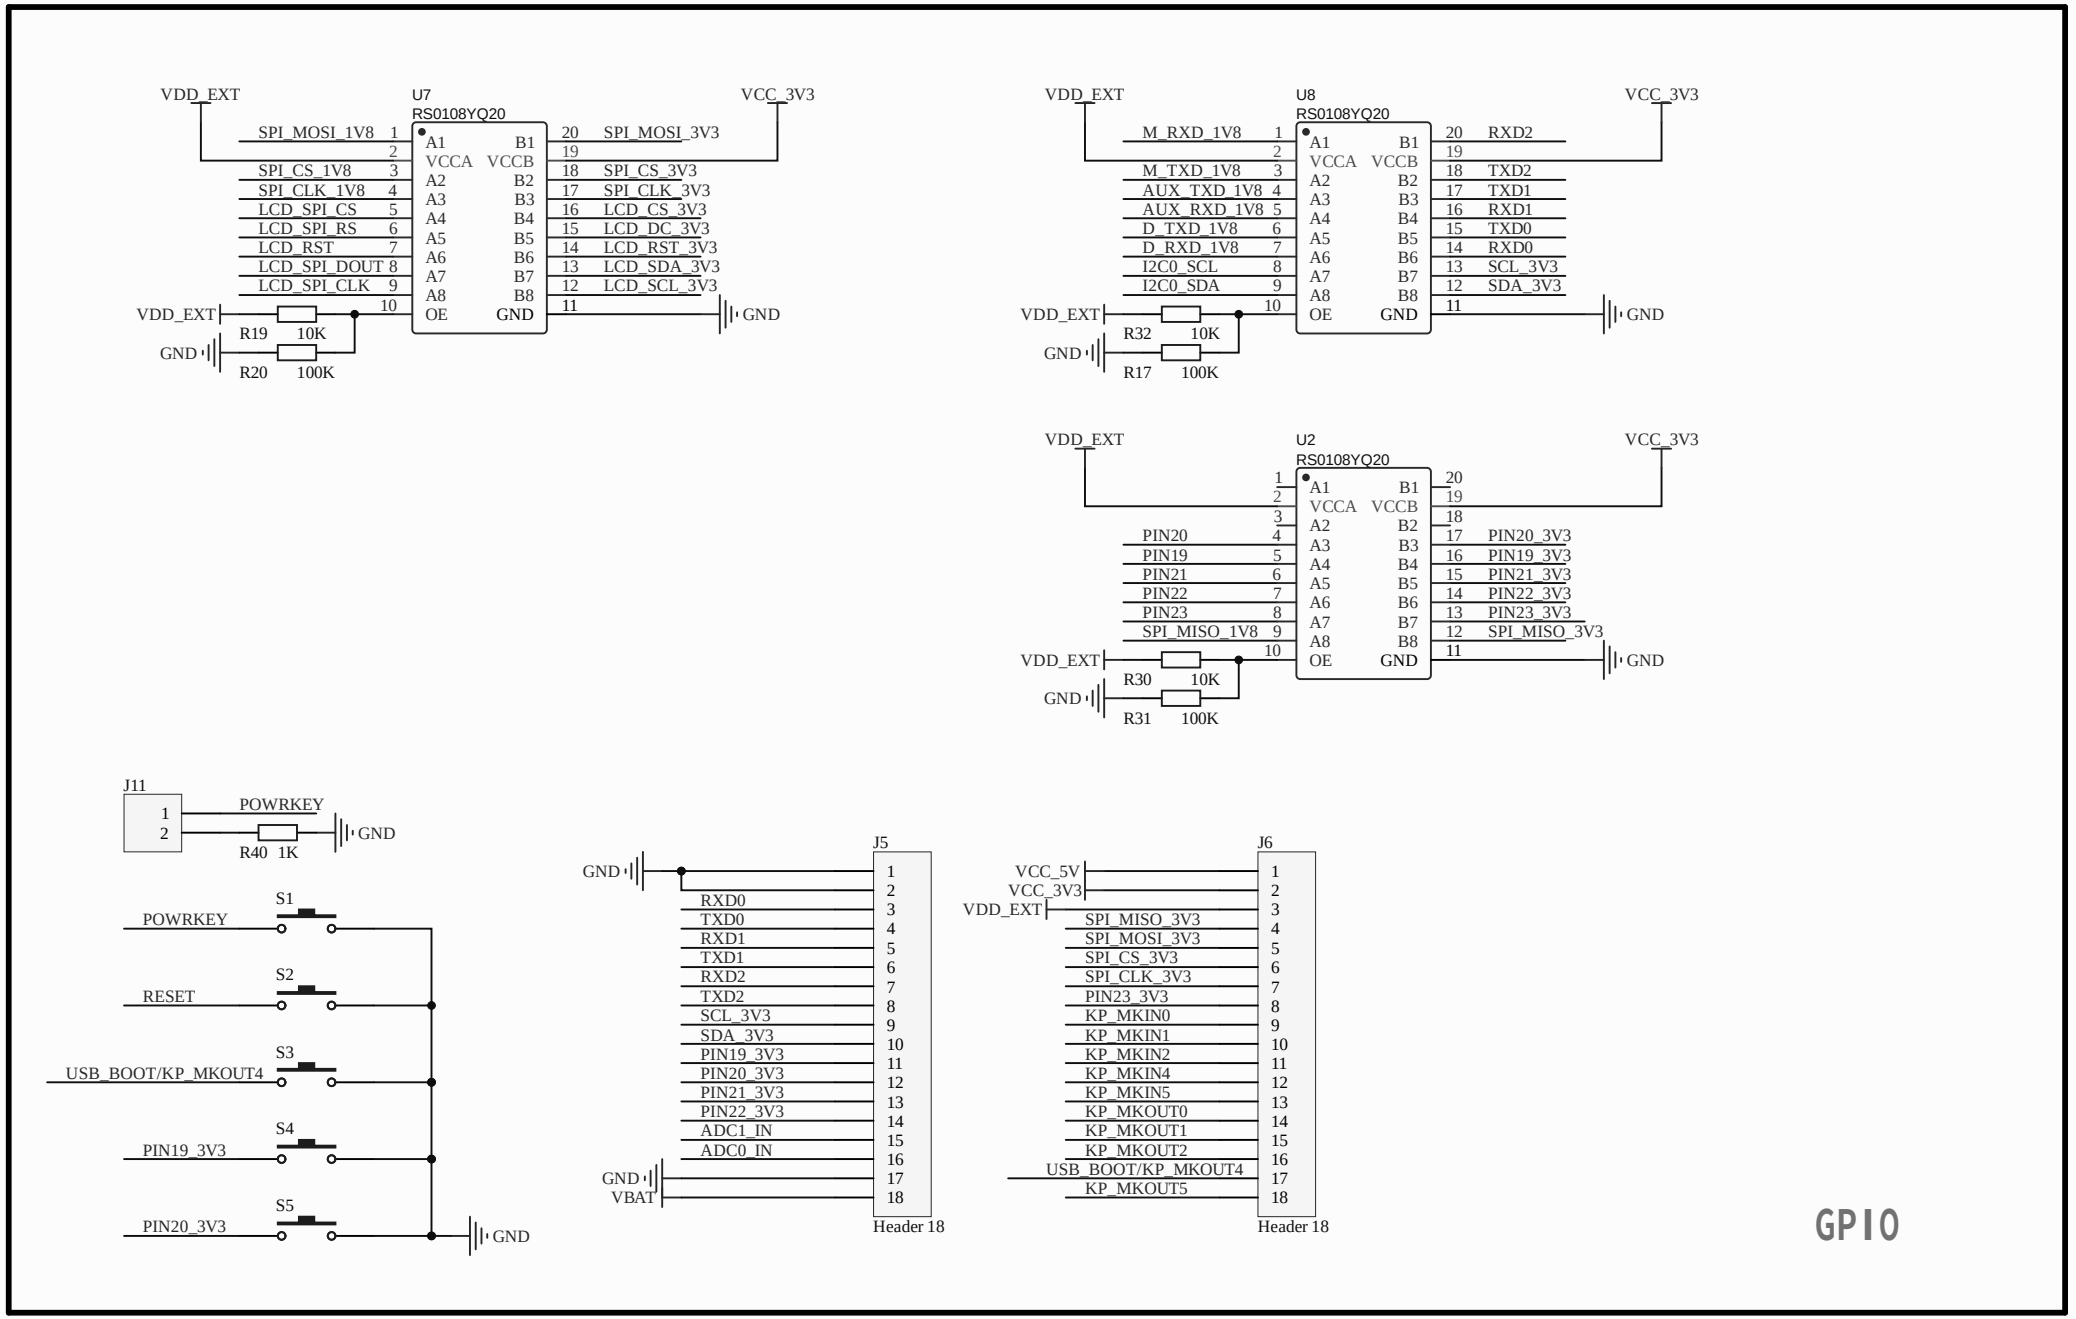
VDD_EXT
U7
RS0108YQ20
VCC_3V3
SPI_MOSI_1V8
SPI_CS_1V8
SPI_CLK_1V8
LCD_SPI_CS
LCD_SPI_RS
LCD_RST
LCD_SPI_DOUT
LCD_SPI_CLK
A1
VCCA
A2
A3
A4
A5
A6
A7
A8
OE
B1
VCCB
B2
B3
B4
B5
B6
B7
B8
GND
SPI_MOSI_3V3
SPI_CS_3V3
SPI_CLK_3V3
LCD_CS_3V3
LCD_DC_3V3
LCD_RST_3V3
LCD_SDA_3V3
LCD_SCL_3V3
R19 10K
R20 100K
U8
M_RXD_1V8
M_TXD_1V8
AUX_TXD_1V8
AUX_RXD_1V8
D_TXD_1V8
D_RXD_1V8
I2C0_SCL
I2C0_SDA
RXD2
TXD2
TXD1
RXD1
TXD0
RXD0
SCL_3V3
SDA_3V3
R32 10K
R17 100K
U2
PIN20
PIN19
PIN21
PIN22
PIN23
SPI_MISO_1V8
PIN20_3V3
PIN19_3V3
PIN21_3V3
PIN22_3V3
PIN23_3V3
SPI_MISO_3V3
R30 10K
R31 100K
J11
POWRKEY
R40 1K
S1
S2
RESET
S3
USB_BOOT/KP_MKOUT4
S4
PIN19_3V3
S5
PIN20_3V3
J5
VBAT
ADC1_IN
ADC0_IN
Header 18
J6
VCC_5V
KP_MKIN0
KP_MKIN1
KP_MKIN2
KP_MKIN4
KP_MKIN5
KP_MKOUT0
KP_MKOUT1
KP_MKOUT2
KP_MKOUT5
GPIO

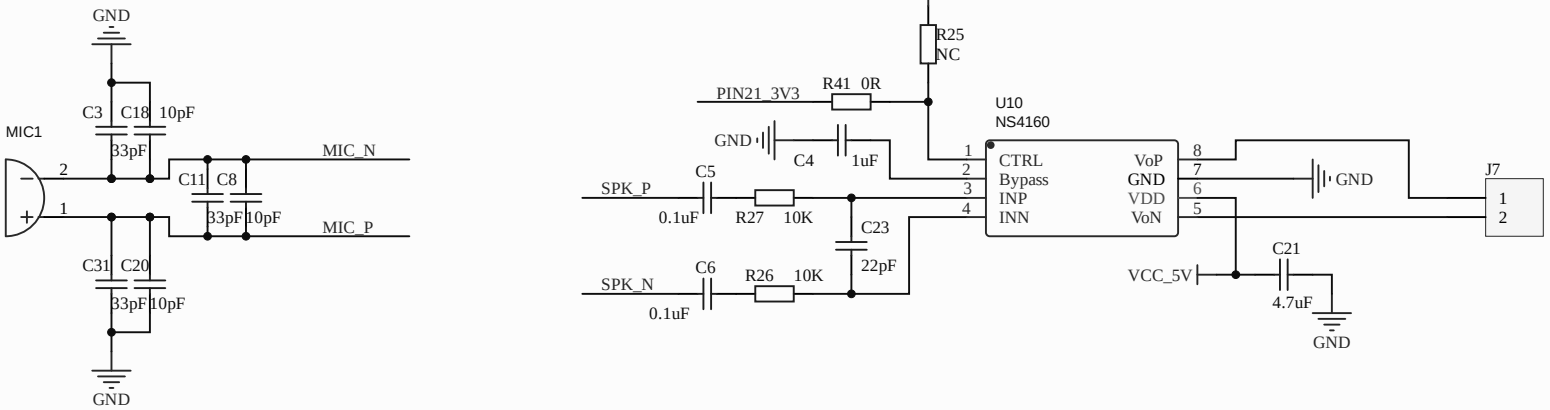

AUDIO 分

AUDIO

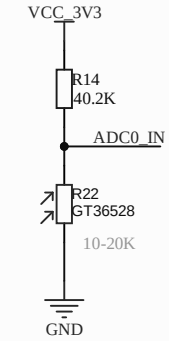
VCC_3V3
R14
40.2K
ADC0_IN
R22
GT36528
10-20K
GND

光

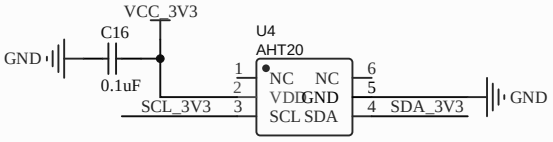
VCC_3V3
C16
0.1uF
GND
U4
AHT20
NC
NC
VDD
GND
SCL
SDA
SCL_3V3
SDA_3V3
GND

传

SENSOR

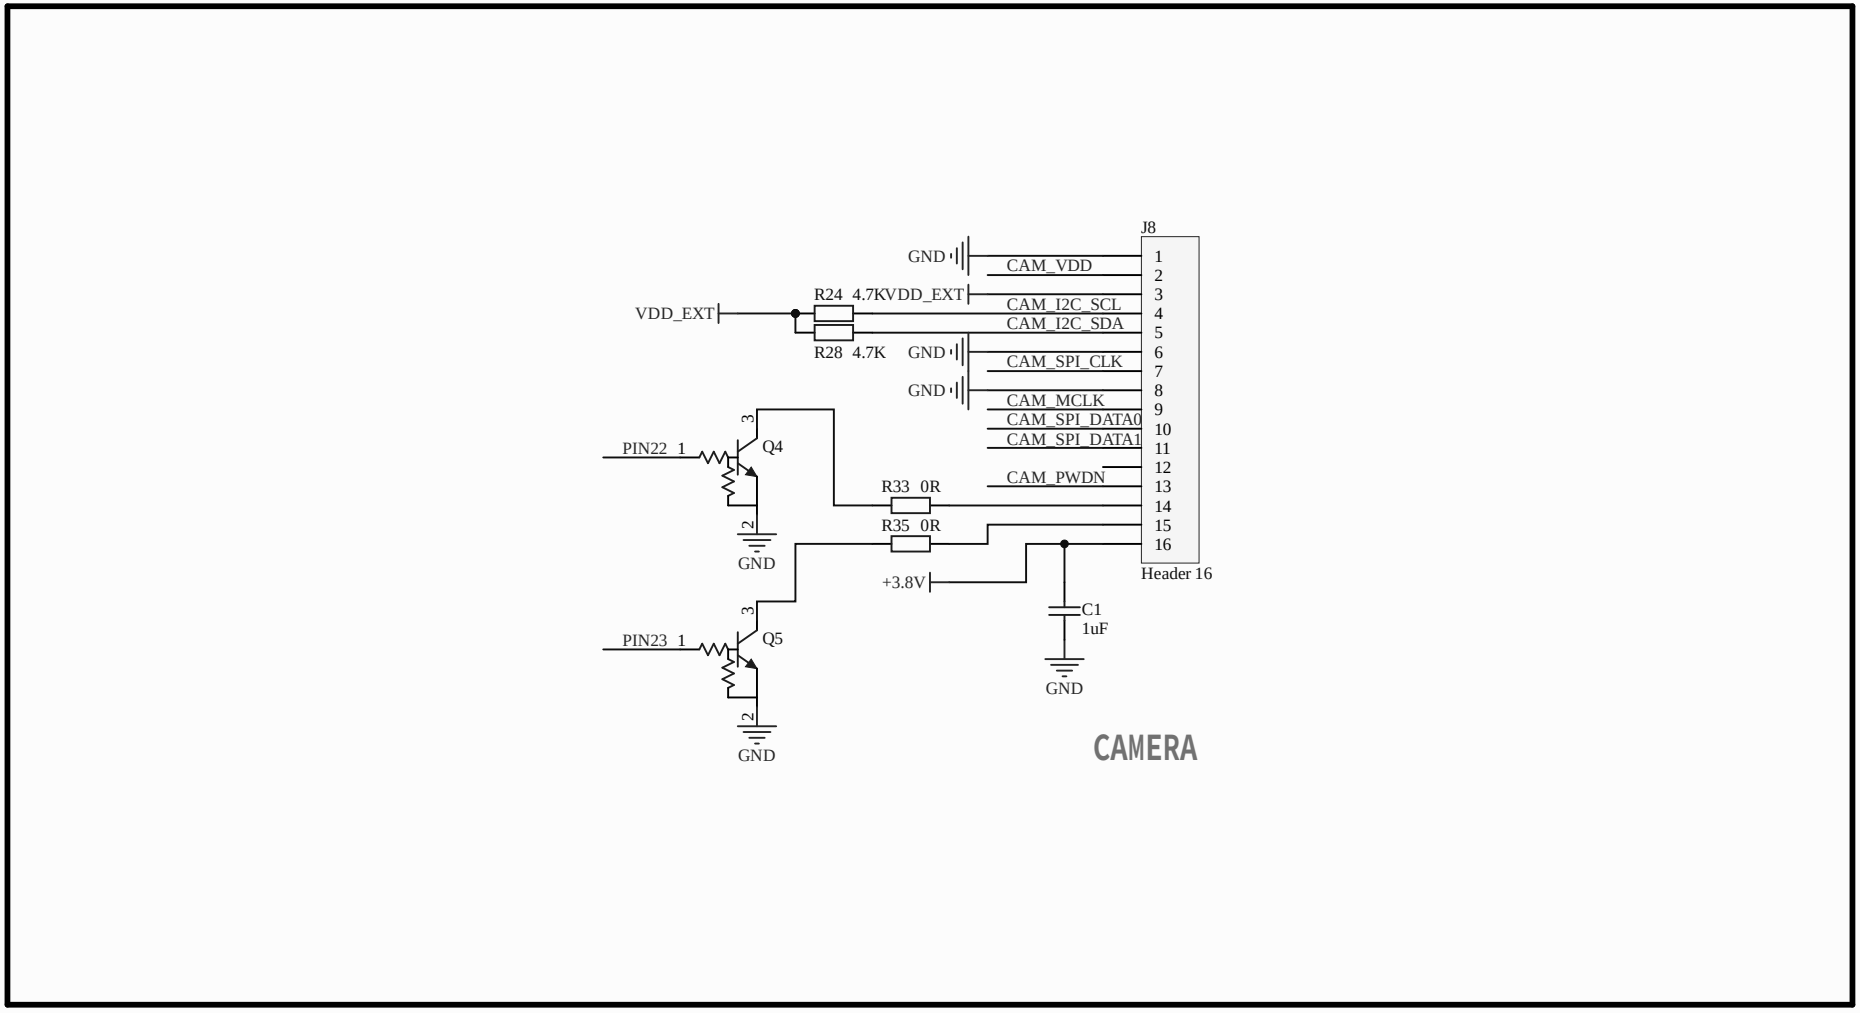
J8
GND
CAM_VDD
R24 4.7K
VDD_EXT
CAM_I2C_SCL
CAM_I2C_SDA
R28 4.7K
GND
CAM_SPI_CLK
GND
CAM_MCLK
CAM_SPI_DATA0
CAM_SPI_DATA1
PIN22 1
Q4
CAM_PWDN
R33 0R
R35 0R
GND
+3.8V
C1
1uF
PIN23 1
Q5
GND
GND
Header 16
CAMERA

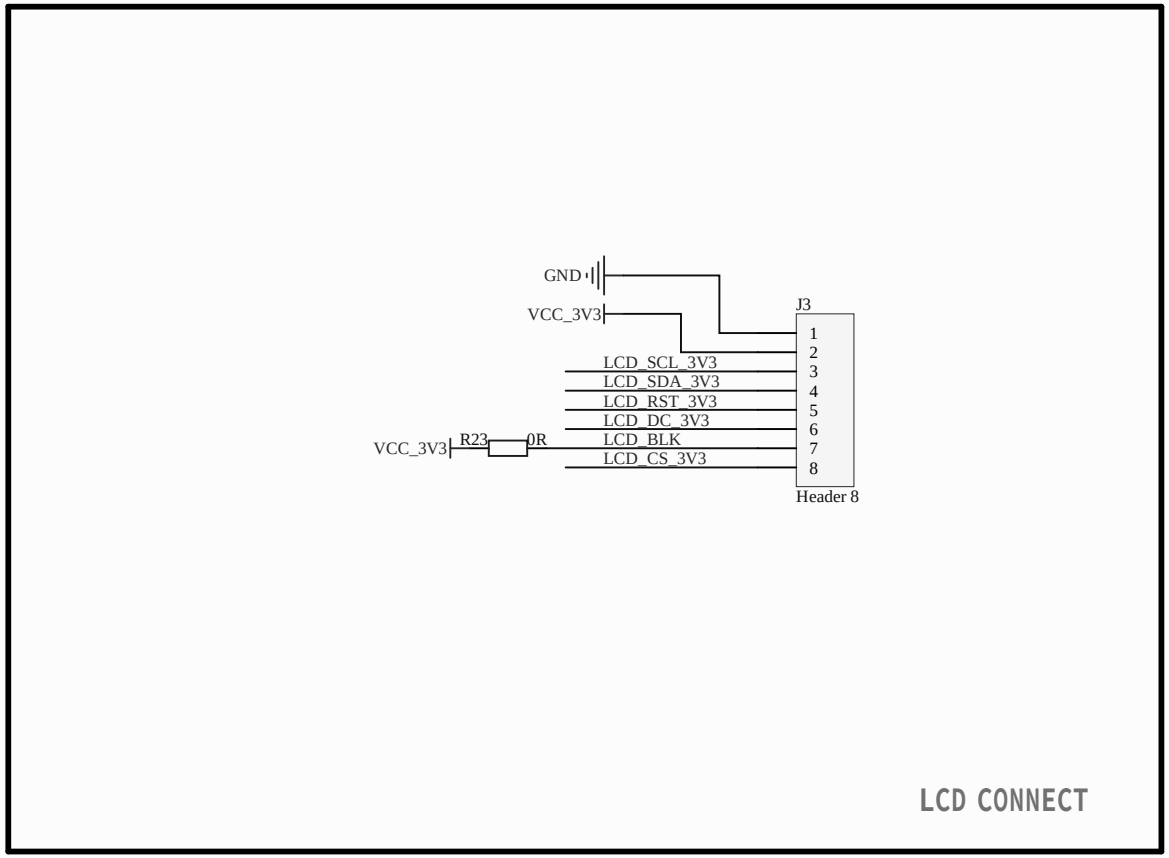
GND
VCC_3V3
J3
1
2
3
4
5
6
7
8
LCD_SCL_3V3
LCD_SDA_3V3
LCD_RST_3V3
LCD_DC_3V3
LCD_BLK
LCD_CS_3V3
VCC_3V3
R23
0R
Header 8
LCD CONNECT

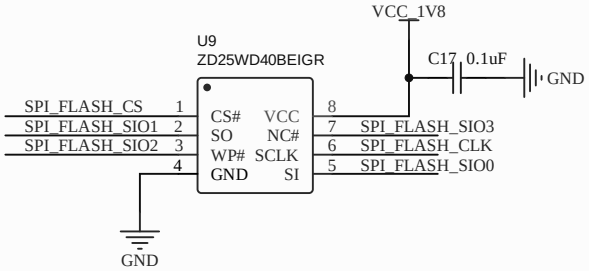
VCC_1V8
U9
ZD25WD40BEIGR
C17 0.1uF
GND
SPI_FLASH_CS 1
SPI_FLASH_SIO1 2
SPI_FLASH_SIO2 3
4
CS# VCC 8
SO NC# 7 SPI_FLASH_SIO3
WP# SCLK 6 SPI_FLASH_CLK
GND SI 5 SPI_FLASH_SIO0
GND

Flash